

<b>CS GLASS DISTRIBUTION ON BURNER</b>	
<b>MODEL</b>	<b>GLASS AMOUNT</b>
<b>CS-16</b>	<b>10 Lbs.</b>
<b>CS-18</b>	<b>10 Lbs.</b>
<b>CS-21</b>	<b>20 Lbs.</b>
<b>CS-24</b>	<b>20 Lbs.</b>
<b>CS-27W</b>	<b>20 Lbs.</b>
<b>CS-30</b>	<b>20 Lbs.</b>
<b>CS-33W</b>	<b>20 Lbs.</b>
<b>CS-36</b>	<b>20 Lbs.</b>
<b>CS-42</b>	<b>30 Lbs.</b>
<b>CS-48</b>	<b>40 Lbs.</b>
<b>CS-54</b>	<b>50 Lbs.</b>
<b>CS-60</b>	<b>50 Lbs.</b>

**Sand or Volcanic Ash should be placed in the burner first under and above the baffle. Finish installation with glass.**

<b>CXF GLASS DISTRIBUTION ON BURNER</b>	
<b>MODEL</b>	<b>GLASS AMOUNT</b>
<b>CXF-12</b>	<b>10 Lbs.</b>
<b>CXF-15</b>	<b>10 Lbs.</b>
<b>CXF-18</b>	<b>20 Lbs.</b>
<b>CXF-21</b>	<b>20 Lbs.</b>
<b>CXF-24</b>	<b>20 Lbs.</b>
<b>CXF-30</b>	<b>20 Lbs.</b>
<b>CXF-36</b>	<b>30 Lbs.</b>

**Sand or Volcanic Ash should be placed in the burner first under and above the baffle. Finish installation with glass.**